


Multicheck



Ident number 12.7229.000



Use the HAUG Multicheck to test the functional efficiency of your HAUG ionizing units

This testing unit is intended for testing the performance of ionizing units supplied by HAUG GmbH & Co. KG.

It is not suitable for testing the performance of HAUG charging units.



ATTENTION!

Make sure that the black probe is kept clean and dry at all times!

Description of unit

Figure 1

1. Probe
2. LED
3. Pushbutton


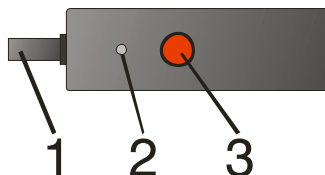


Figure 2

4. Screws

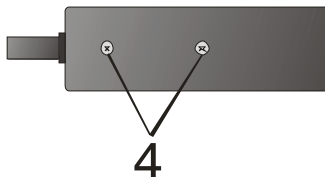


Testing of HAUG ionizing bars:

For testing, press the pushbutton and guide the test instrument vertically towards the ionizing pins.

The LED will first light up RED; when the probe makes contact, the LED must be GREEN if the ionizer is operating correctly.



Testing of HAUG ring ionizer, air gate and annular electrode:

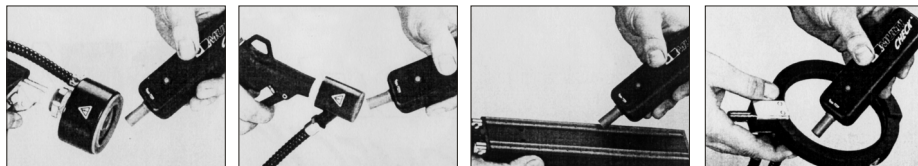

For testing, press the pushbutton and guide the test instrument vertically towards the ionizing pins.

The LED will first light up RED; when the probe makes contact, the LED must be GREEN if the ionizer is operating correctly.

Changing the battery:

To change the battery, remove the two screws on the rear cover. Open the Multicheck and replace the battery (9 V monobloc battery). Reclose the unit using the two screws.

Technical data:

Housing dimensions: approx. 155 x 42 x 22 mm
Power supply: 9 Volt monobloc battery

General instructions:

A defective ionizing bar may cause a short-circuit in the high voltage of the power pack. The high voltage cannot be checked in this case. The ionizing units must therefore be disconnected from the power pack. The power pack can then be checked for proper functioning. If the power pack is ok, the ionizing units can be reconnected to the power pack and checked one after another. This test sequence therefore allows both defective ionizing units and high-voltage power packs to be identified.



INFORMATION!

To check the power packs, we recommend using the Powercheck or Combicheck.

made by



HAUG GmbH & Co.KG

Friedrich-List-Straße 18
D-70771 Leinfelden-Echterdingen
Telefon 07 11 / 94 98 - 0
Telefax 07 11 / 94 98 - 298

www.haug.de
E-Mail: info@haug.de

HAUG Biel AG

Postfach
CH-2500 Biel/Bienne 6
Johann-Renfer-Strasse 60
CH-2500 Biel/Bienne 6
Telefon 0 32 / 3 44 96 96
Telefax 0 32 / 3 44 96 97

www.haug.de
E-Mail: info@haug-biel.ch